




1. PRECAST CONCRETE BASE.
2.  $\frac{1}{2}$ " STEEL PLATE, BOLTED ONTO CONCRETE.
3. 12" L-HOOK STEEL ANCHOR BOLT, IMBEDDED IN CONCRETE.
4. 1  $\frac{1}{4}$ "X2"X18" IPE WOOD SLATS.
5. 8"X8"X $\frac{1}{2}$ " STEEL U-BRACKET, IMBEDDED IN CONCRETE, 3" CLEAR FROM EDGE OF CONCRETE.

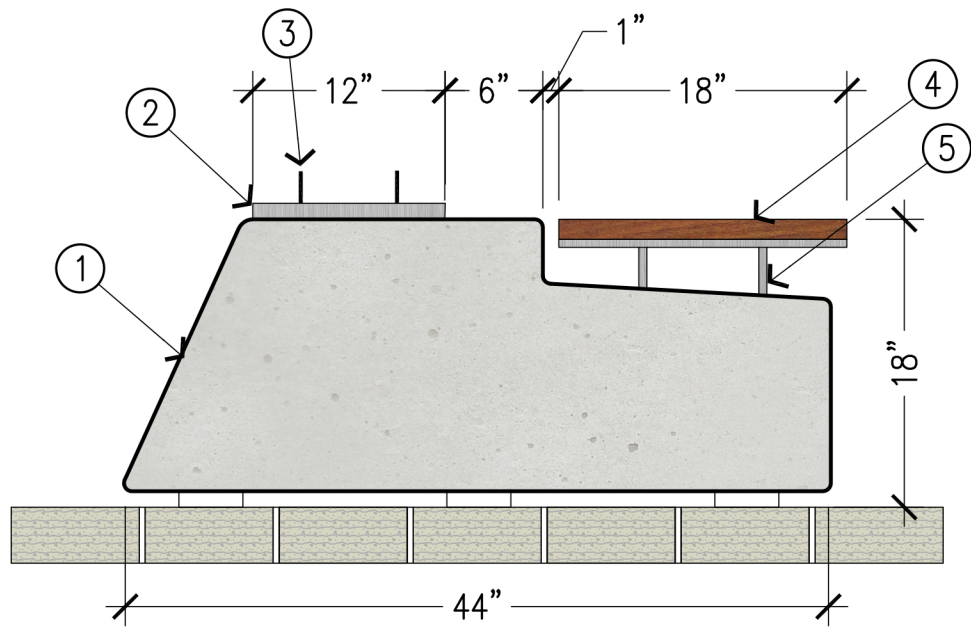

SIDE ELEVATION

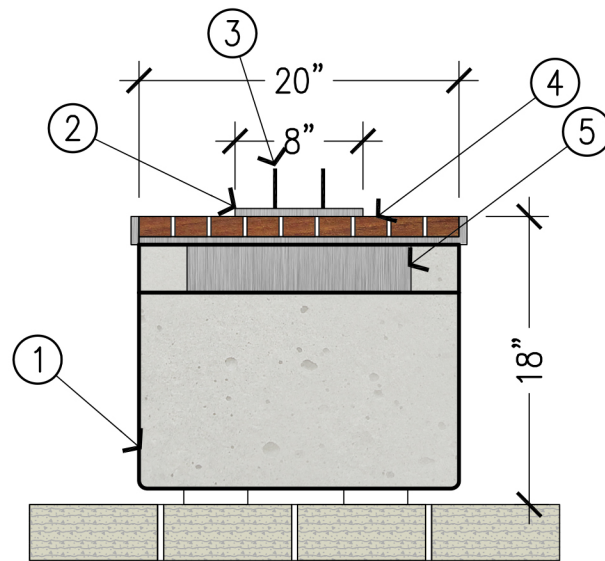

FRONT ELEVATION

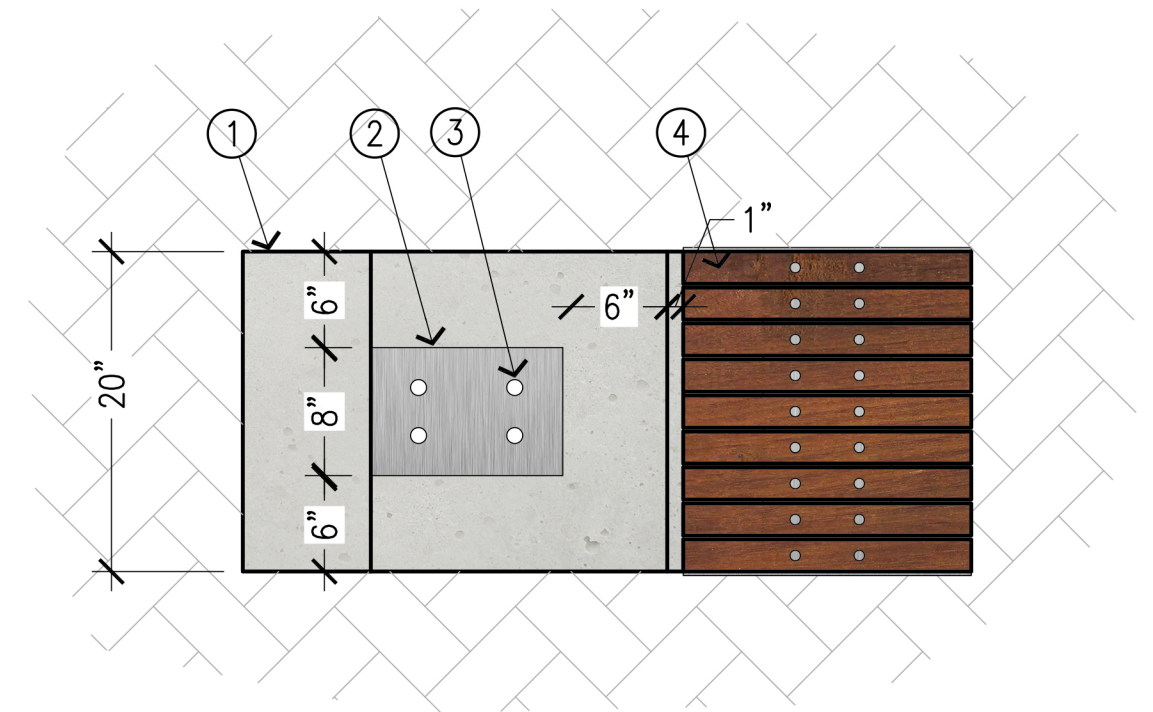

PLAN VIEW



**Perteet**

425-252-7700 | 1-800-615-9900  
2707 Colby Avenue, Suite 900  
Everett, Washington 98201

**CASCADE  
DESIGN  
COLLABORATIVE**